

1/23



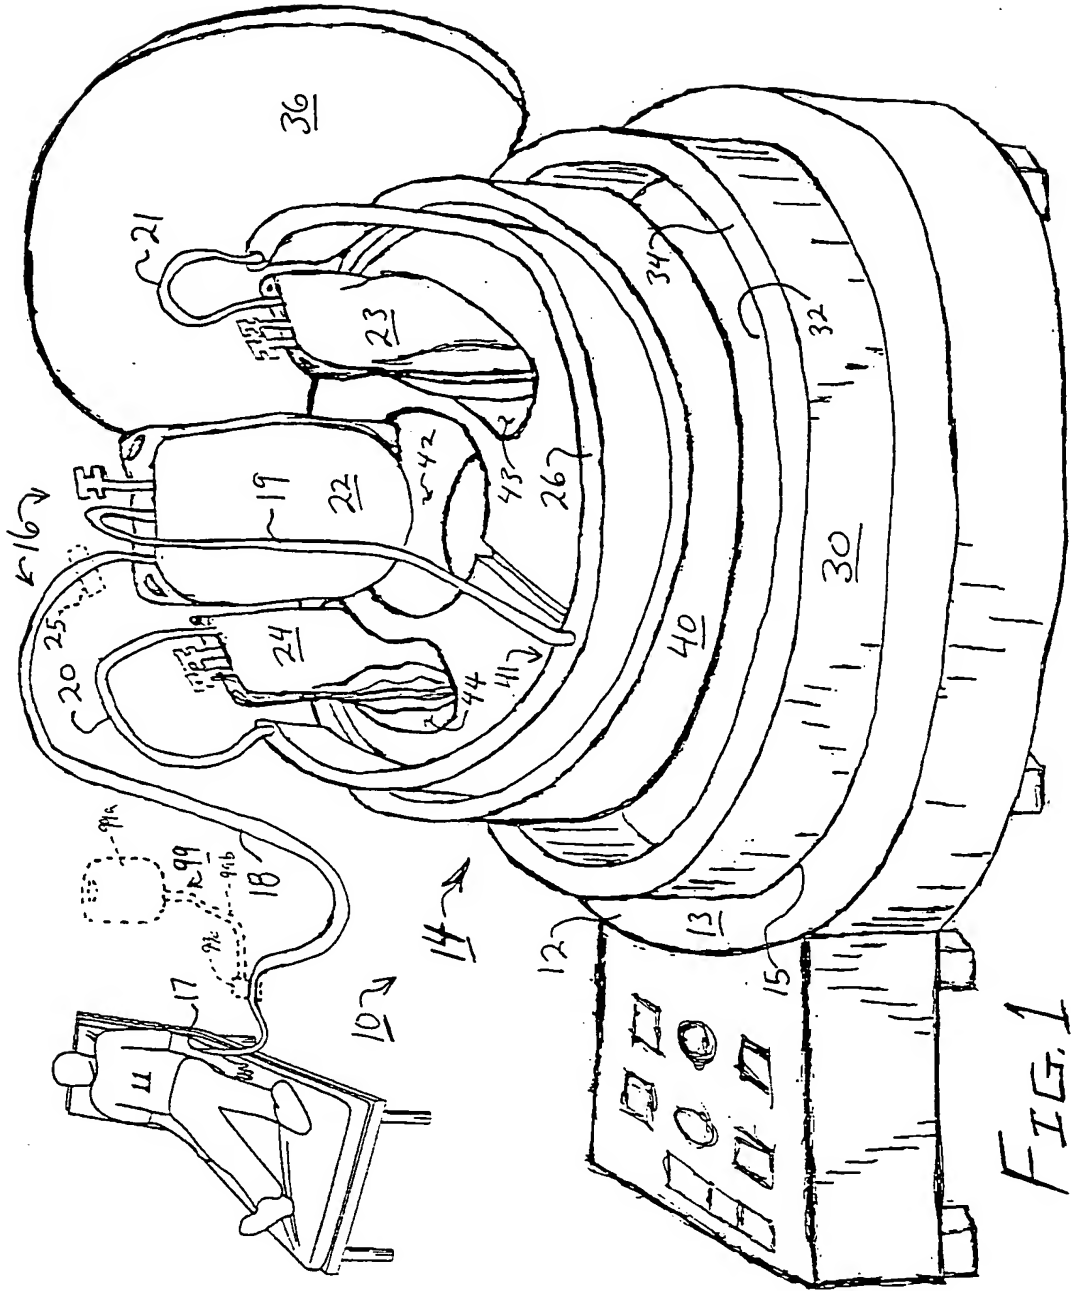


FIG. 1

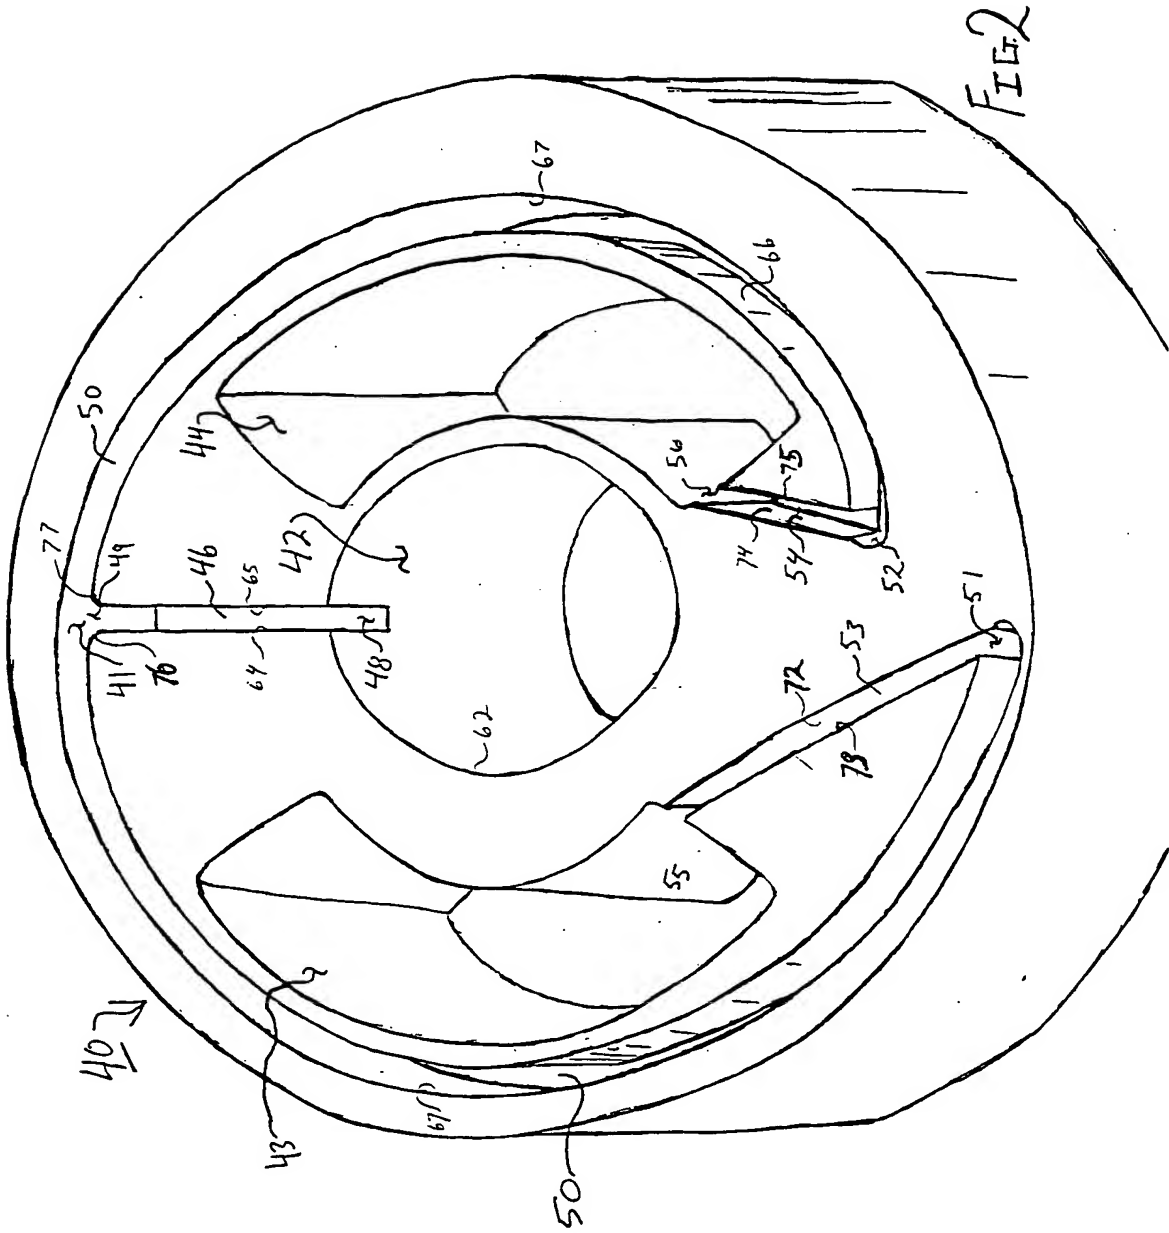

3/23

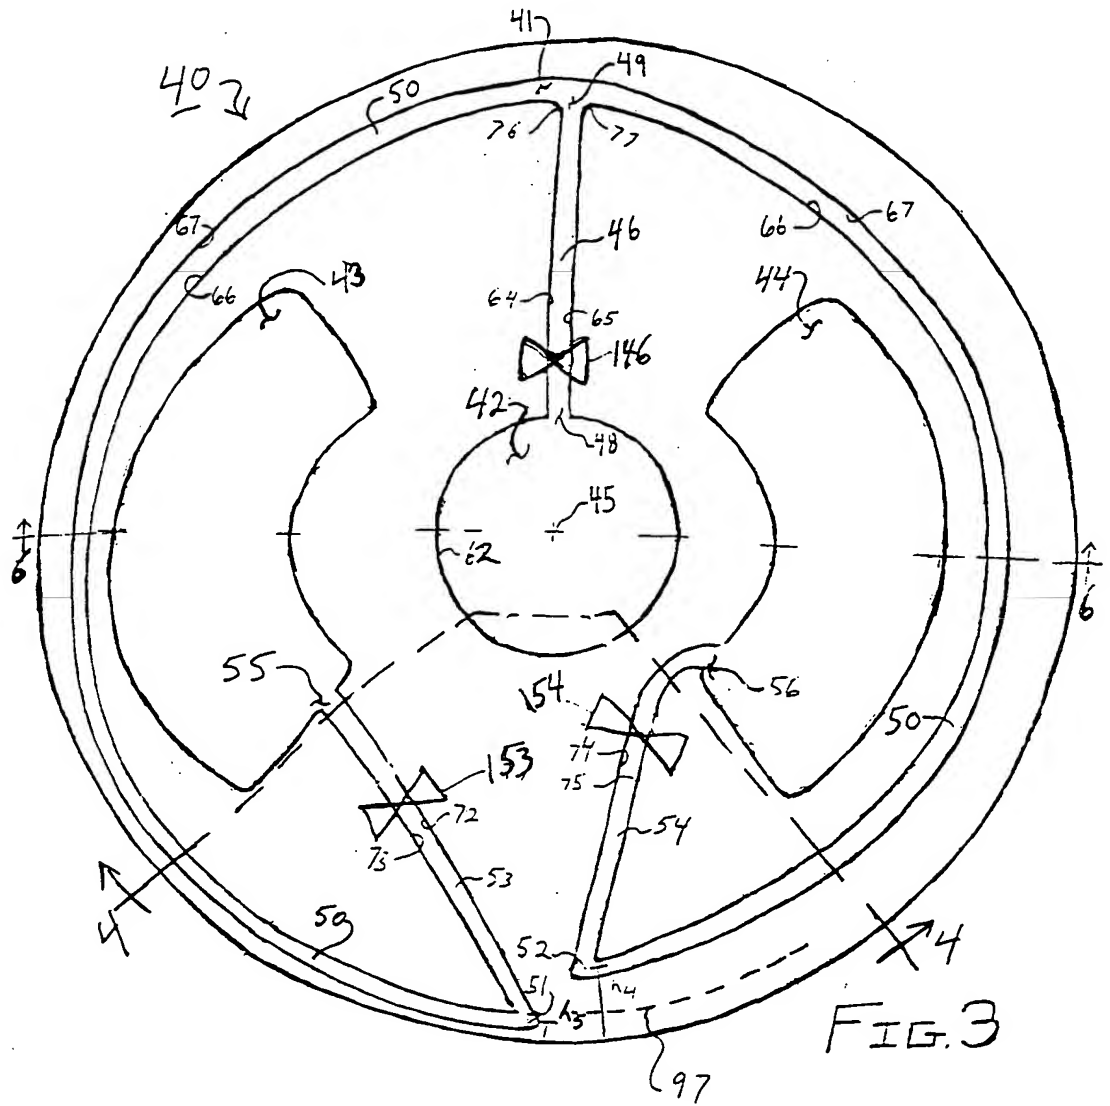

4/23

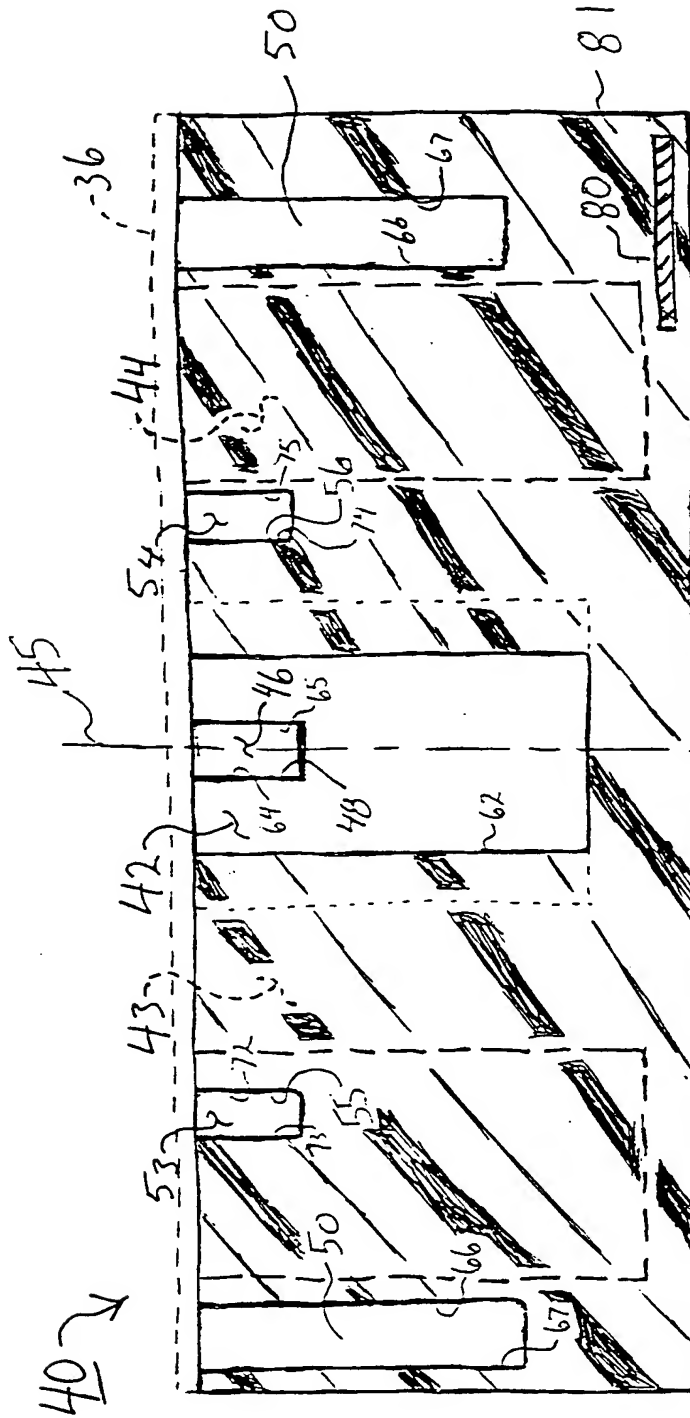


FIG. 4

5/23




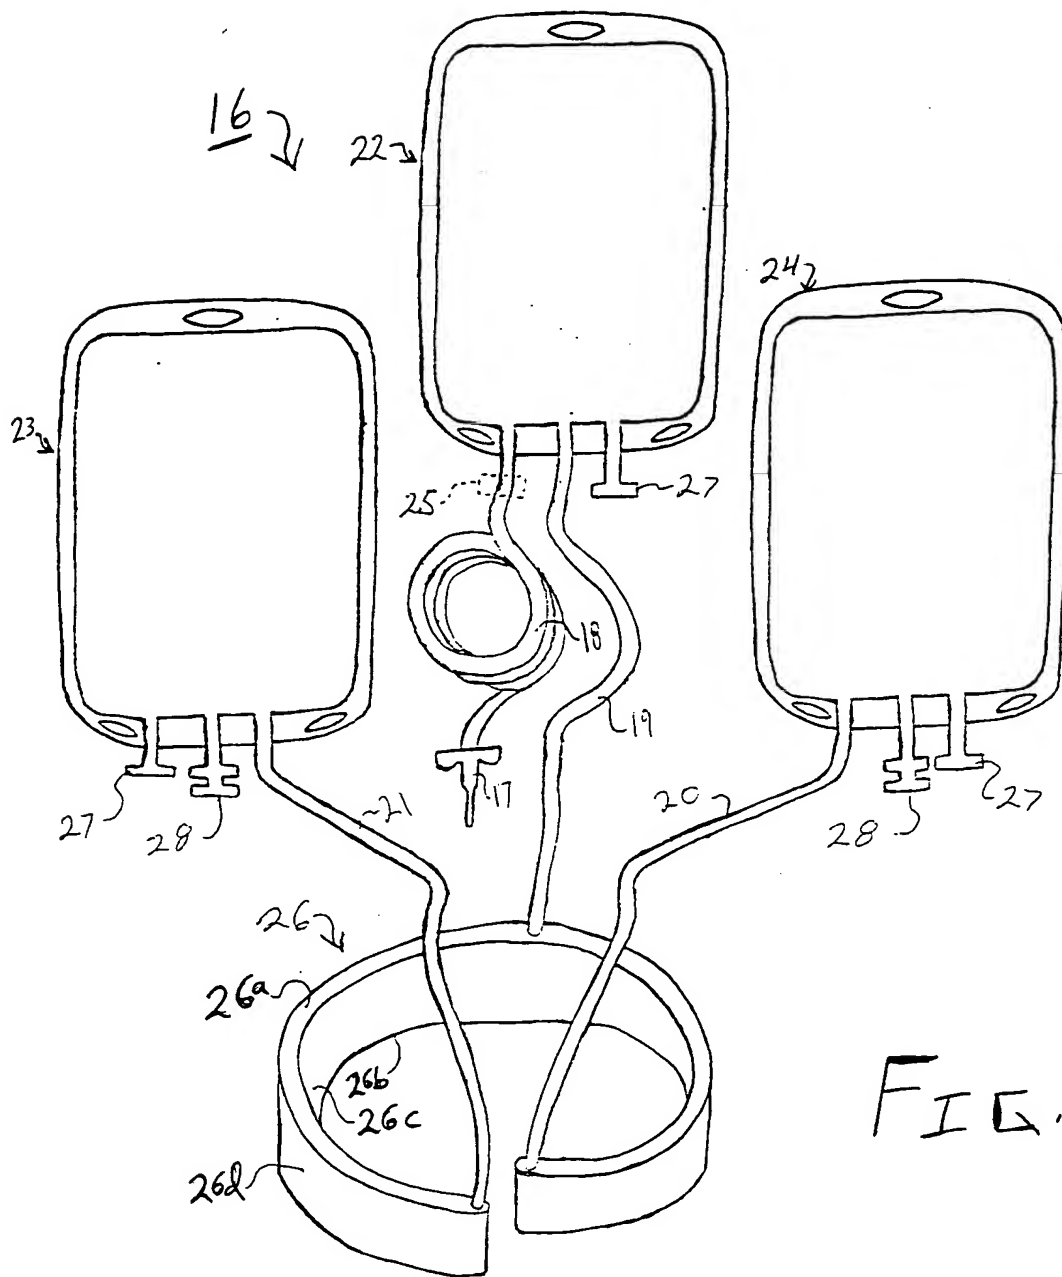



FIG. 5

6/23

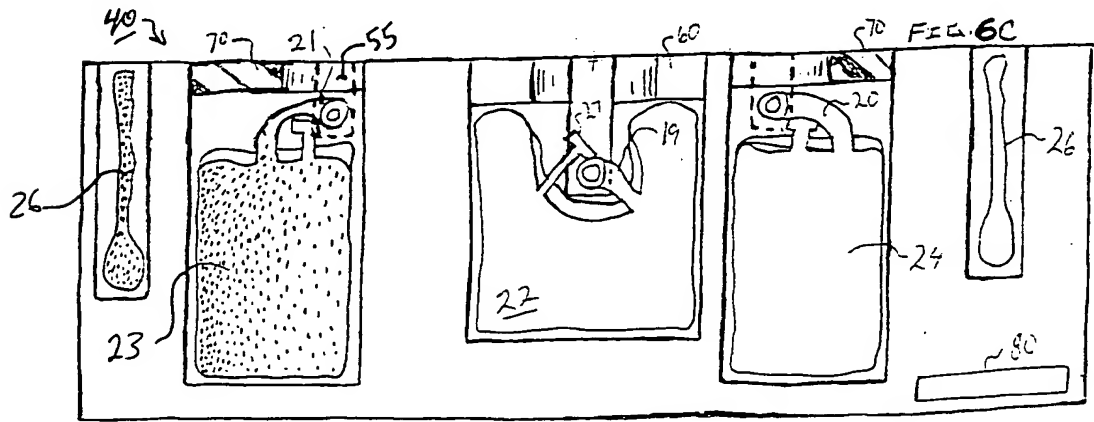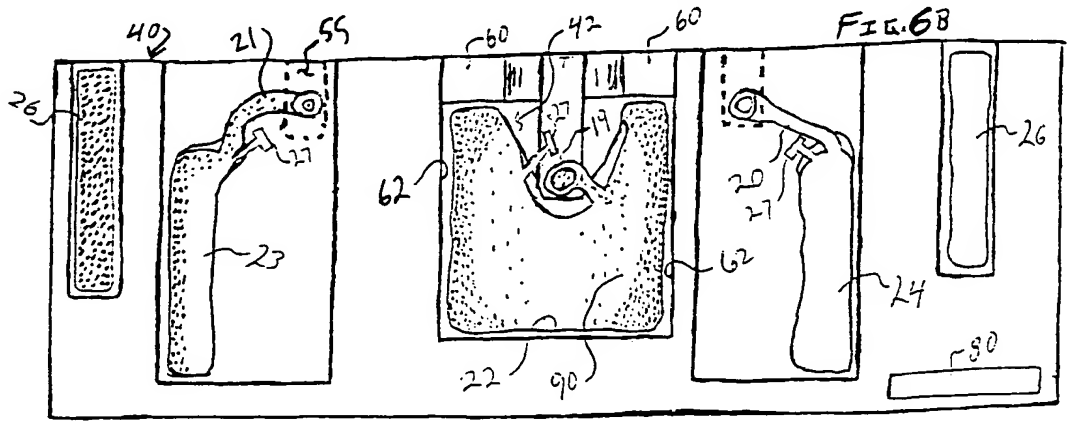

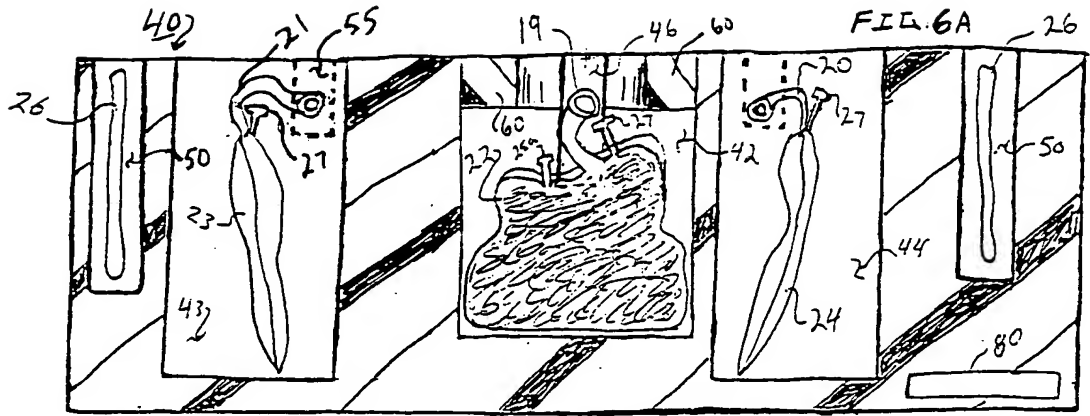

8/23

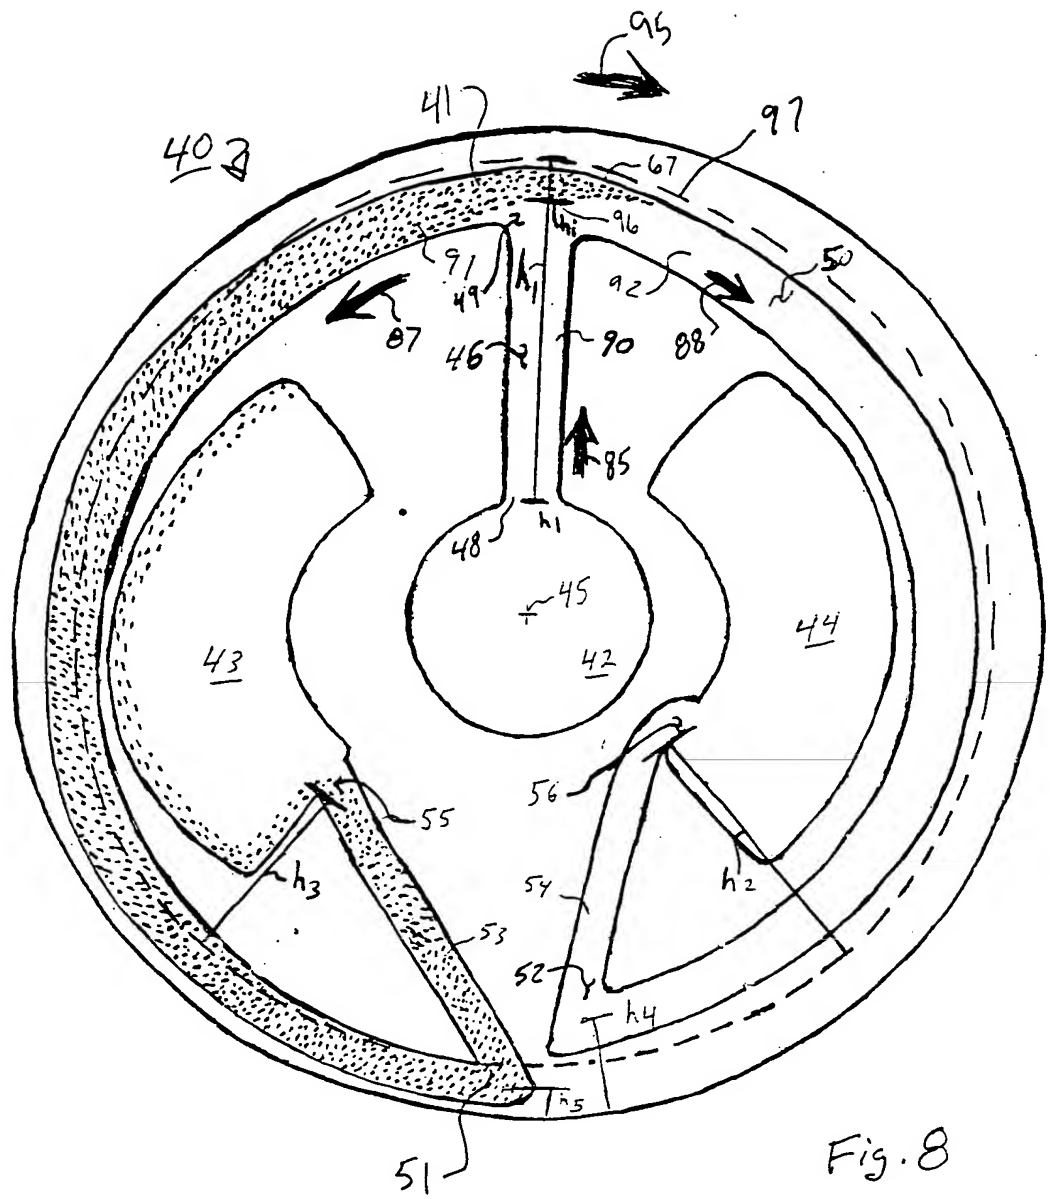

10005431.110204



9/23

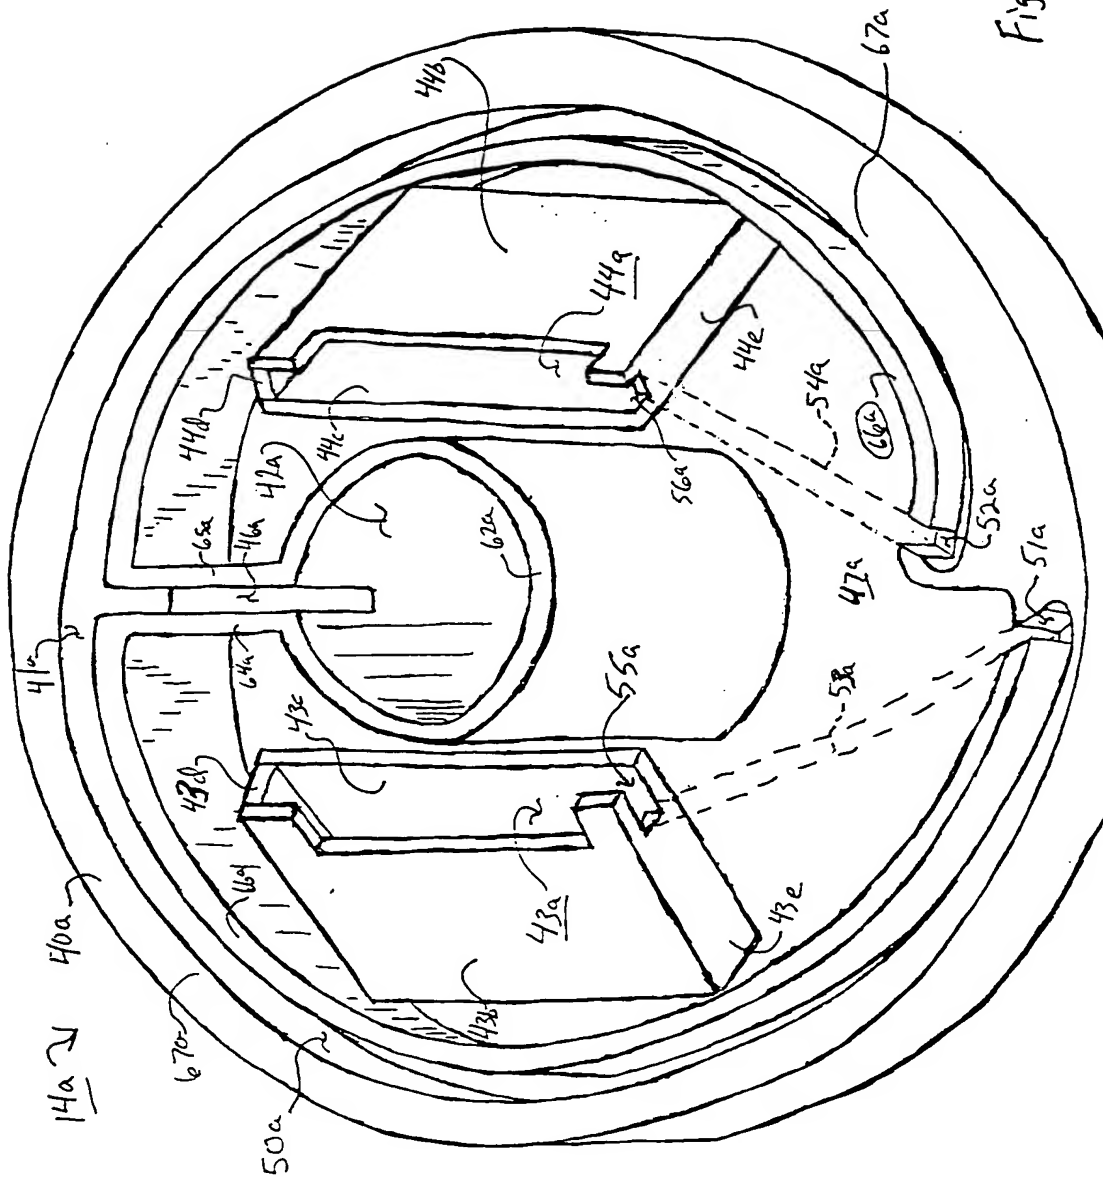


Fig. 9

10/23





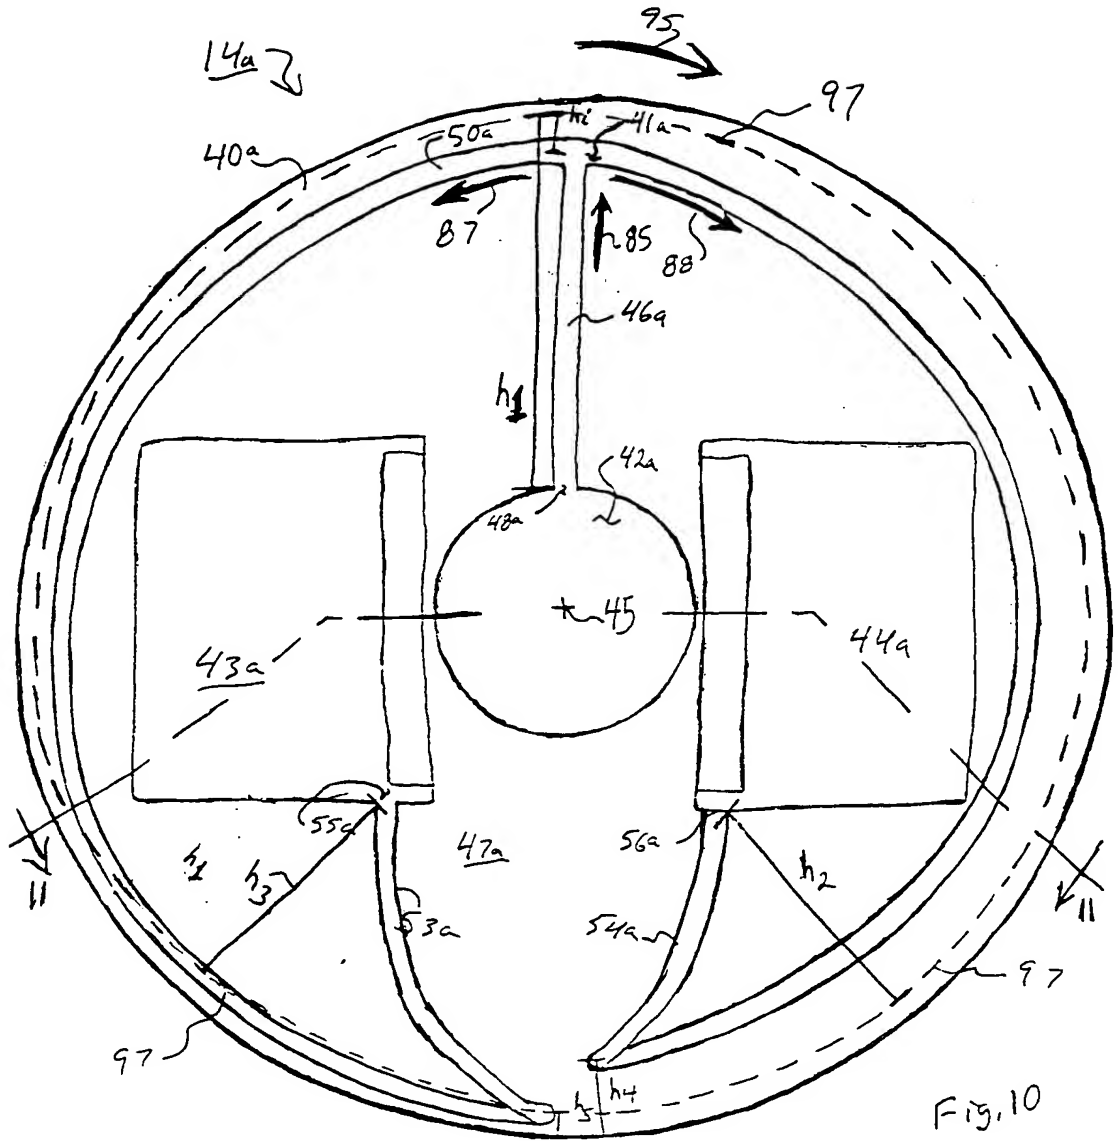


FIG. 10

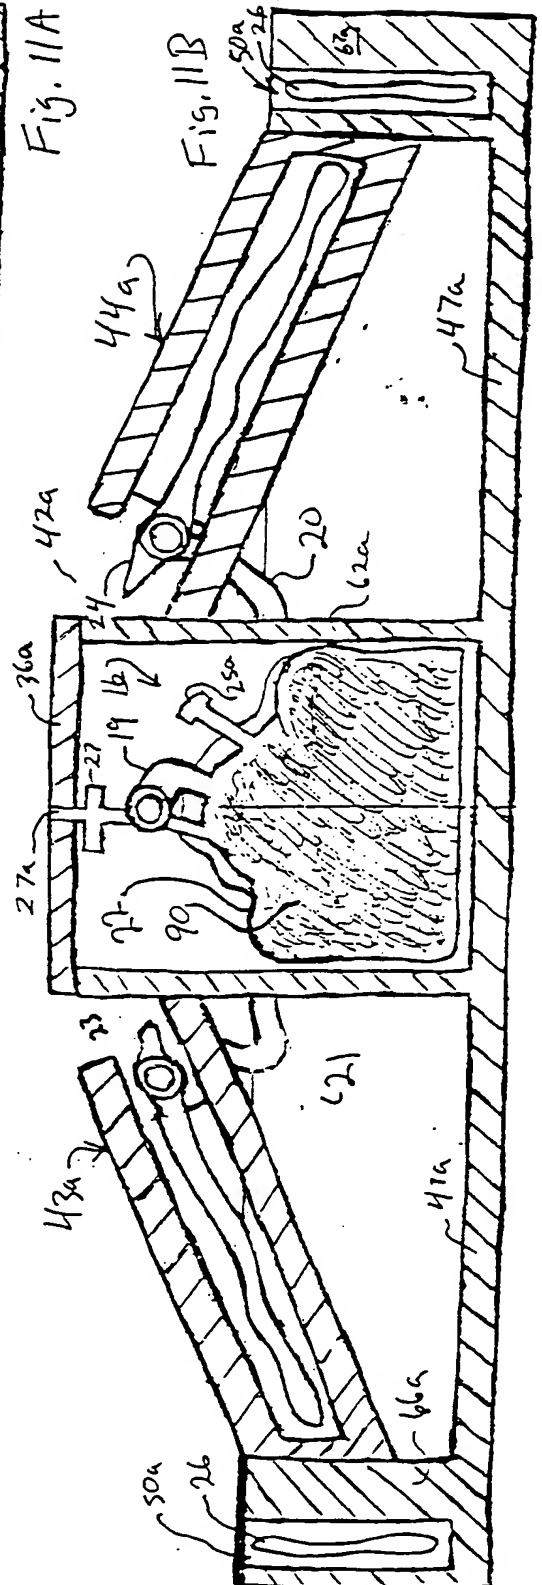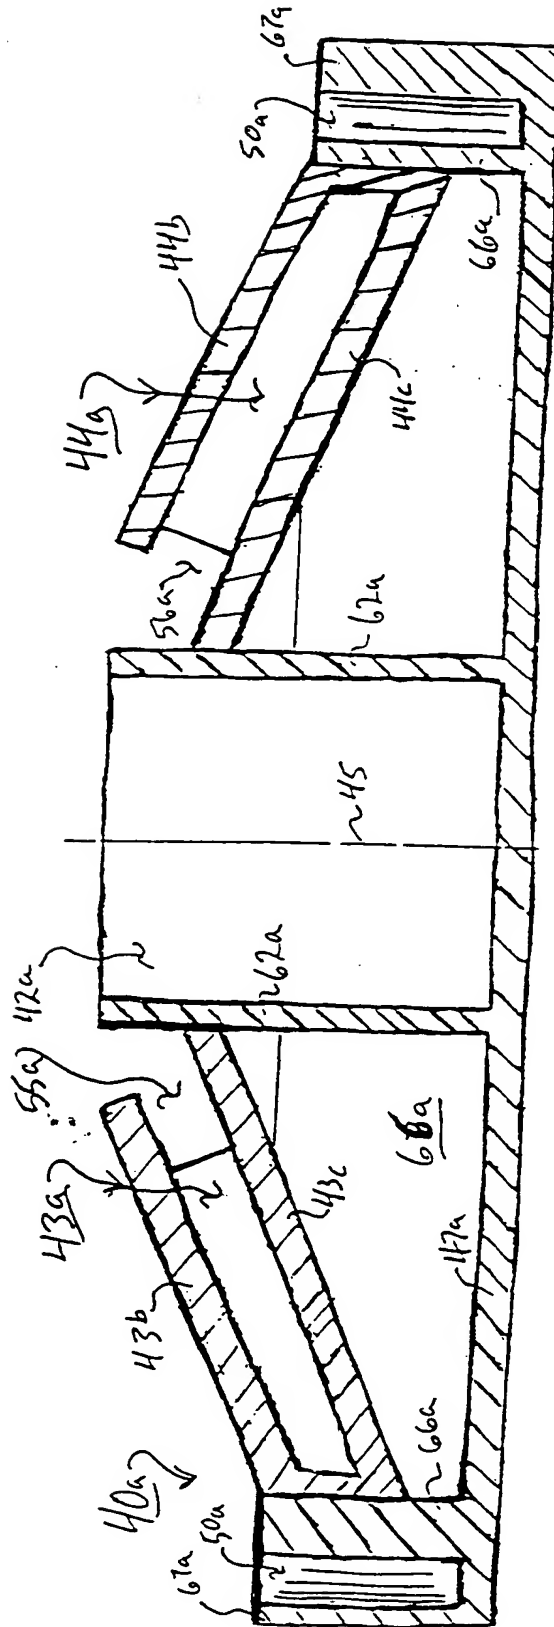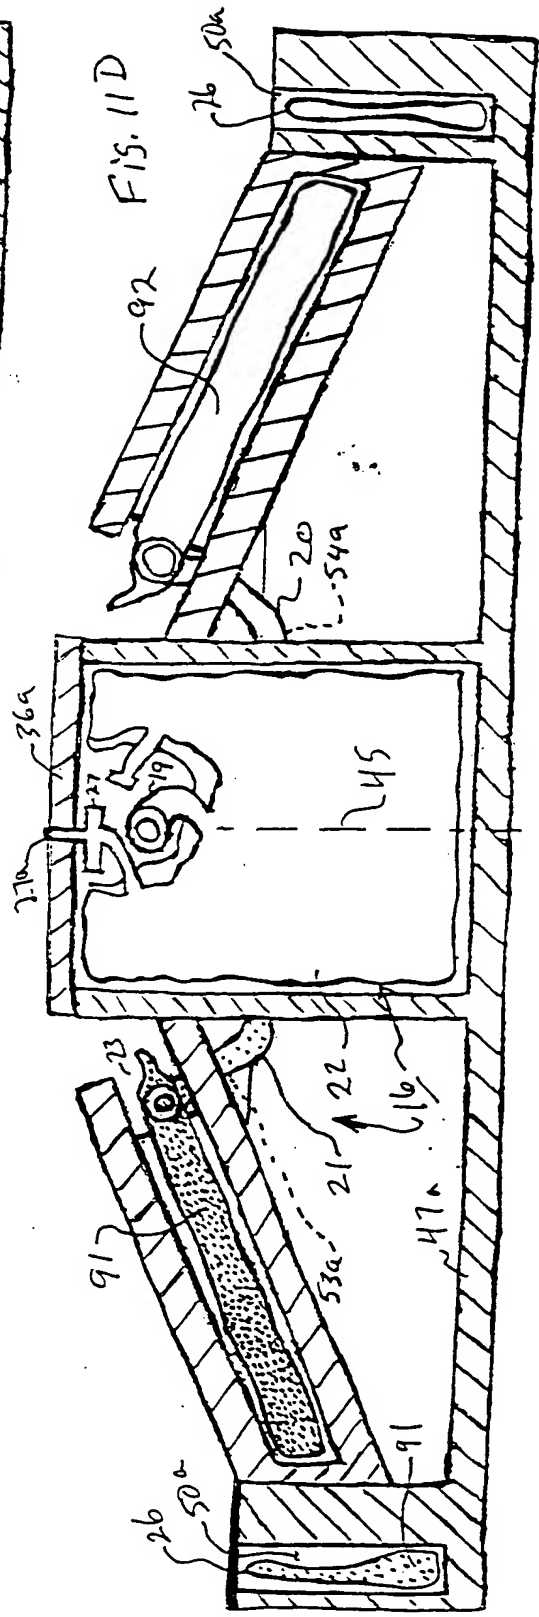

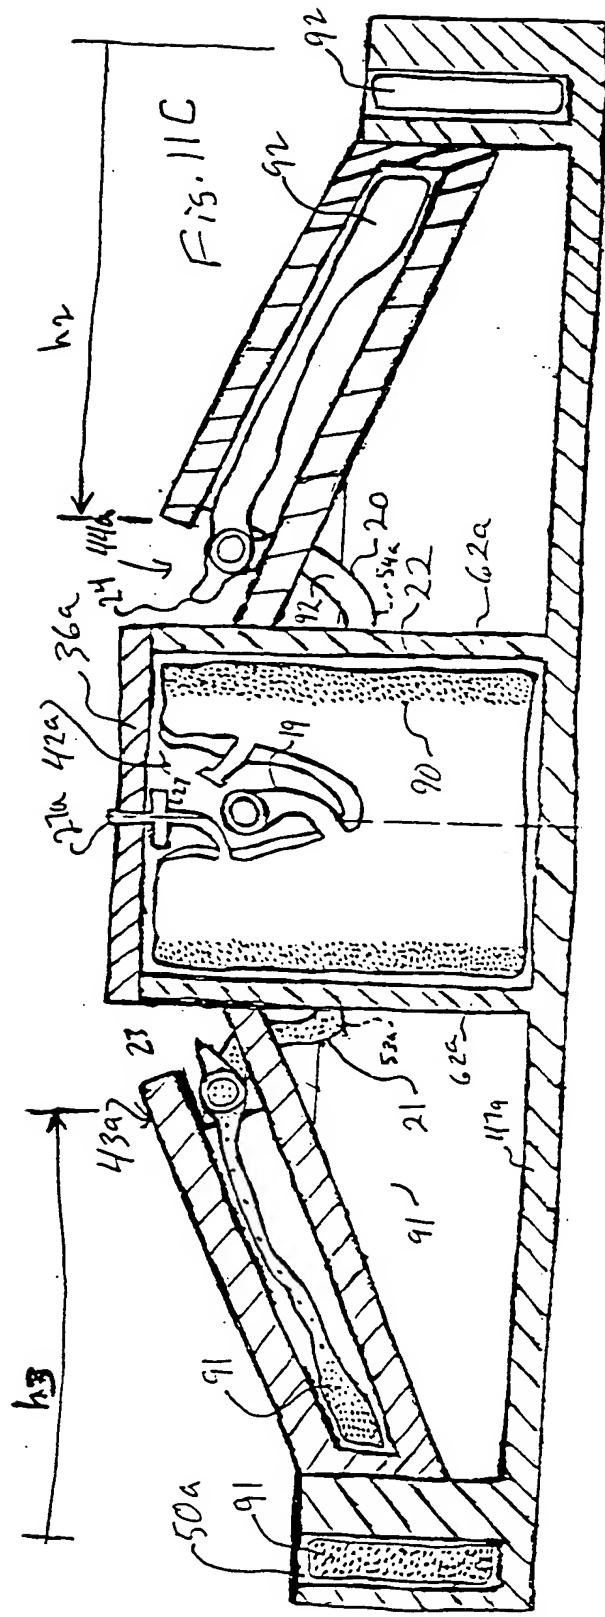

13/23

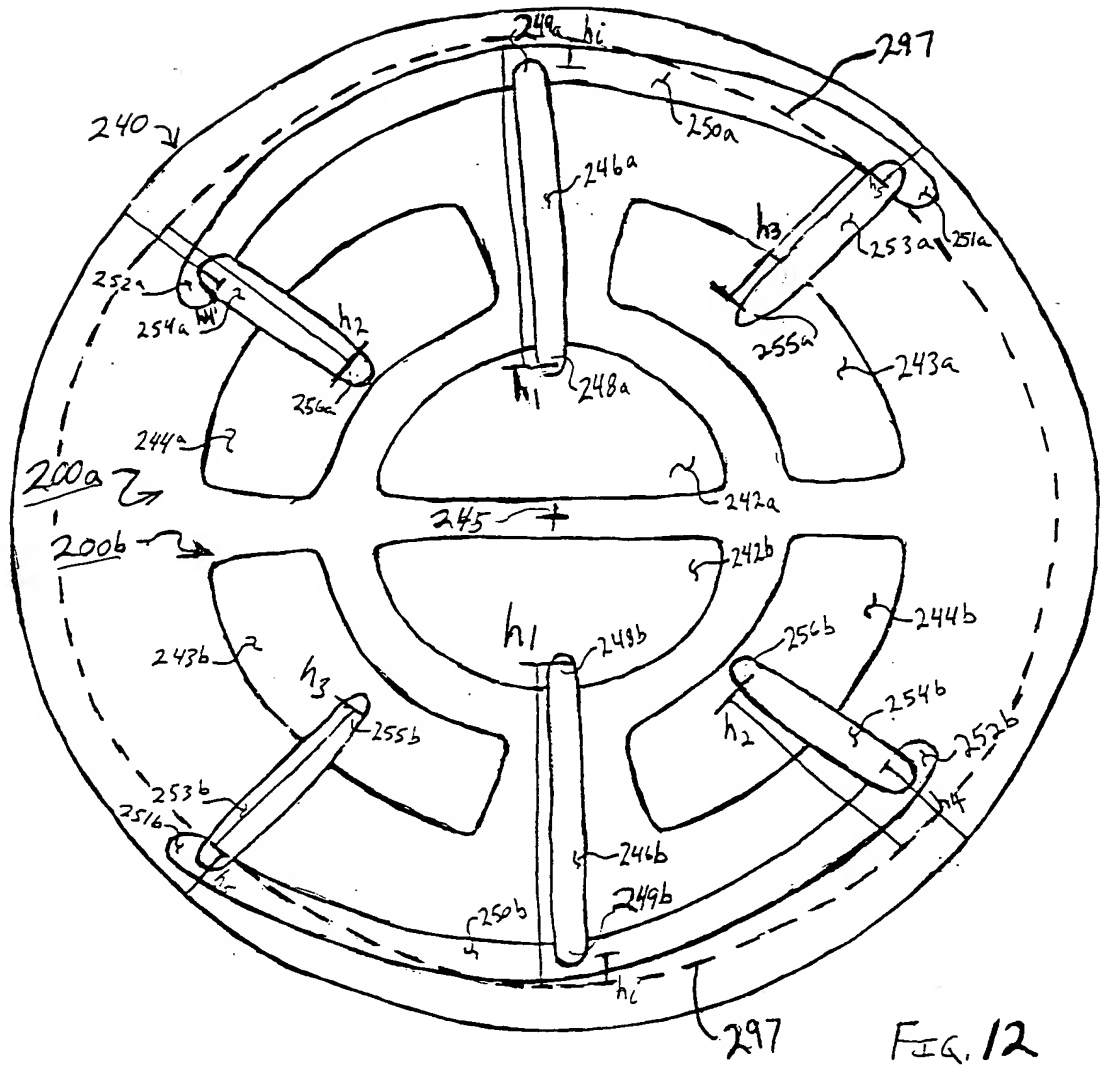


FIG. 12

1000541 102017

14/23

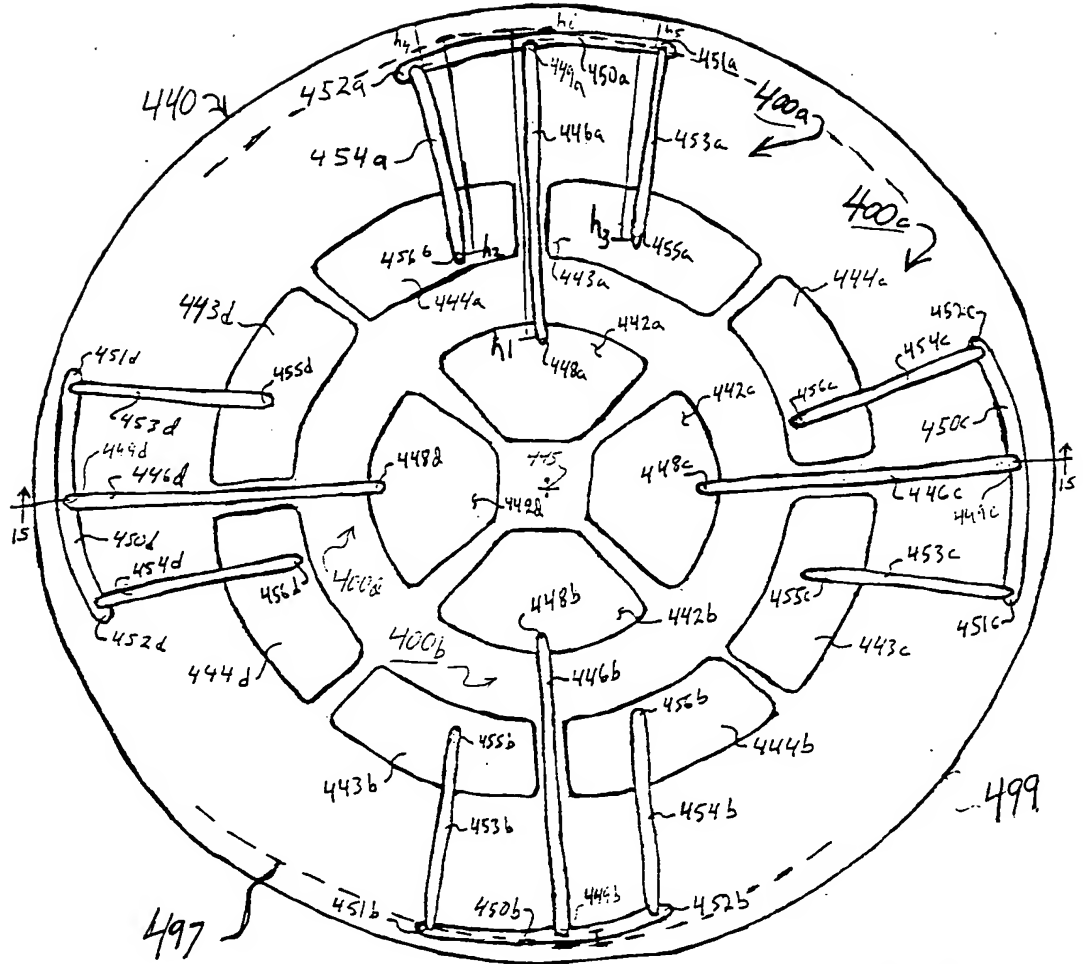


Fig. 13

10005431.11000

15/23

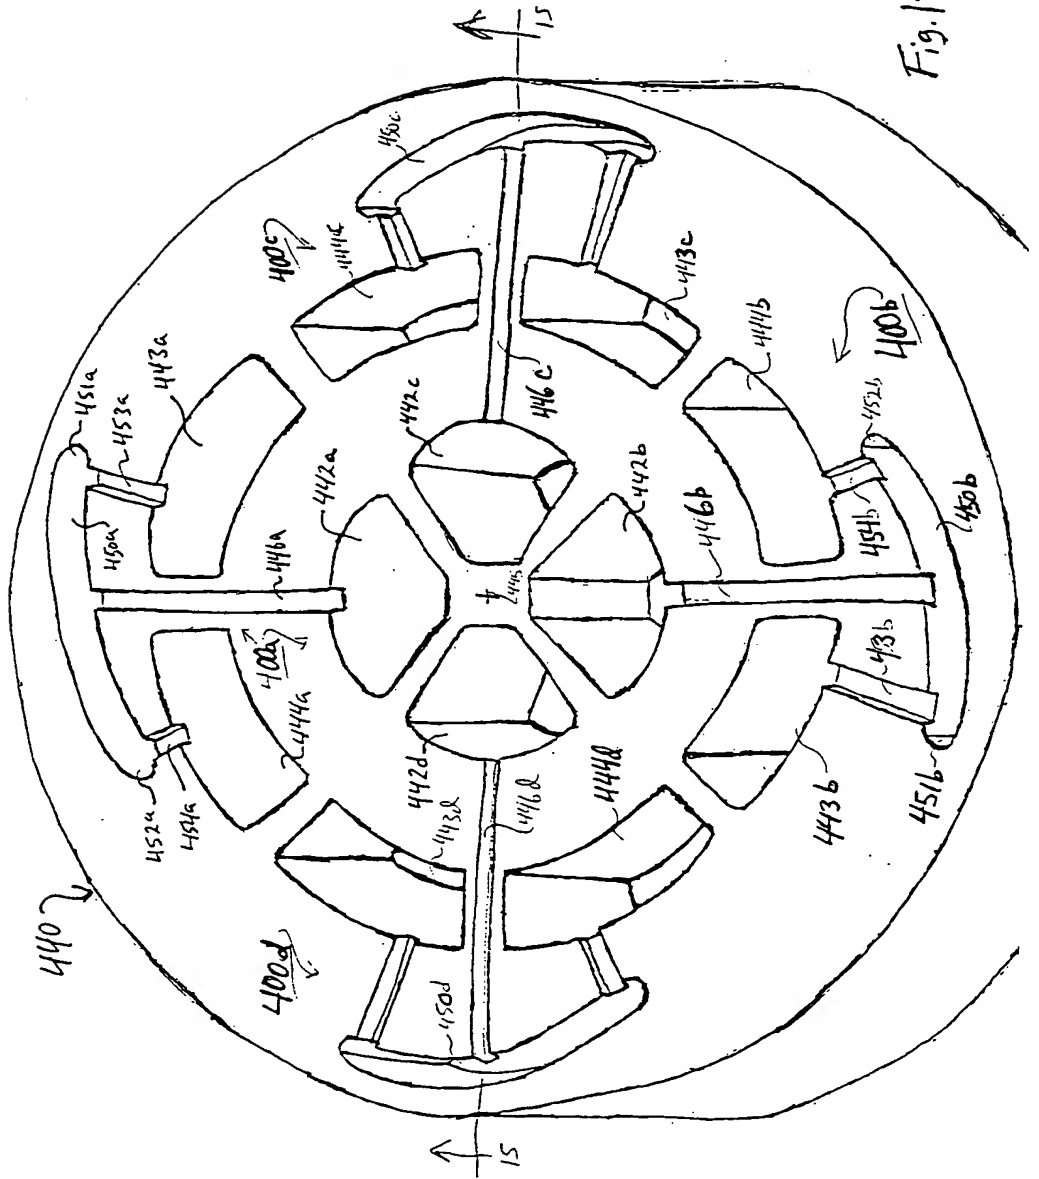


Fig. 14

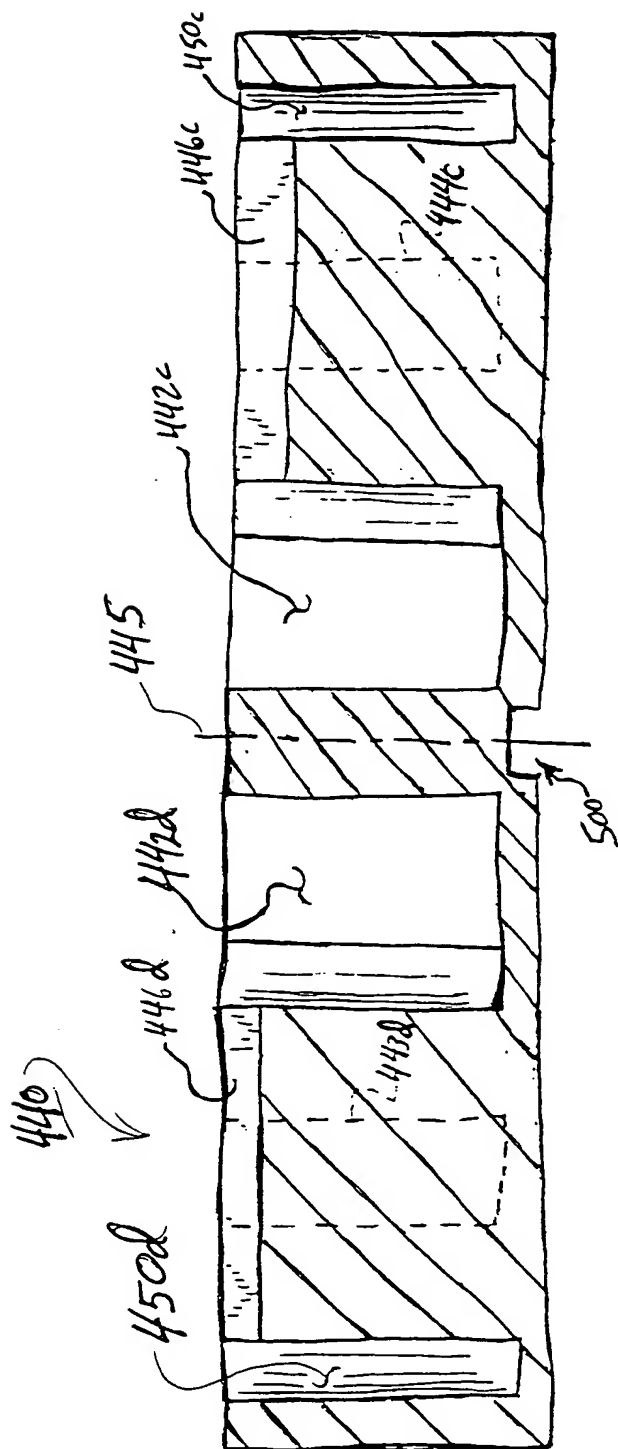


Fig. 15



17/23


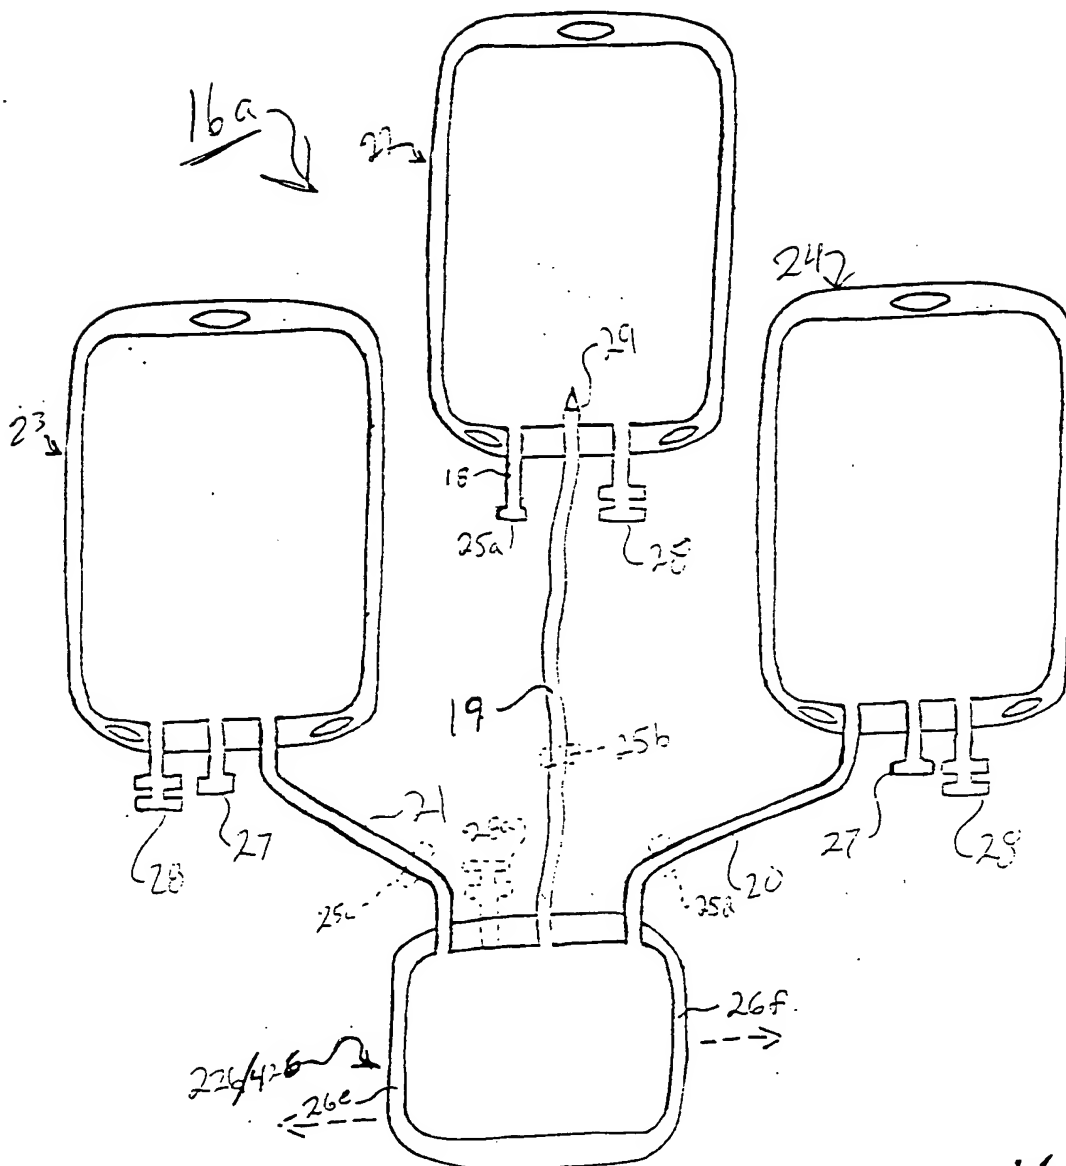


Fig. 16

18/23



19/23

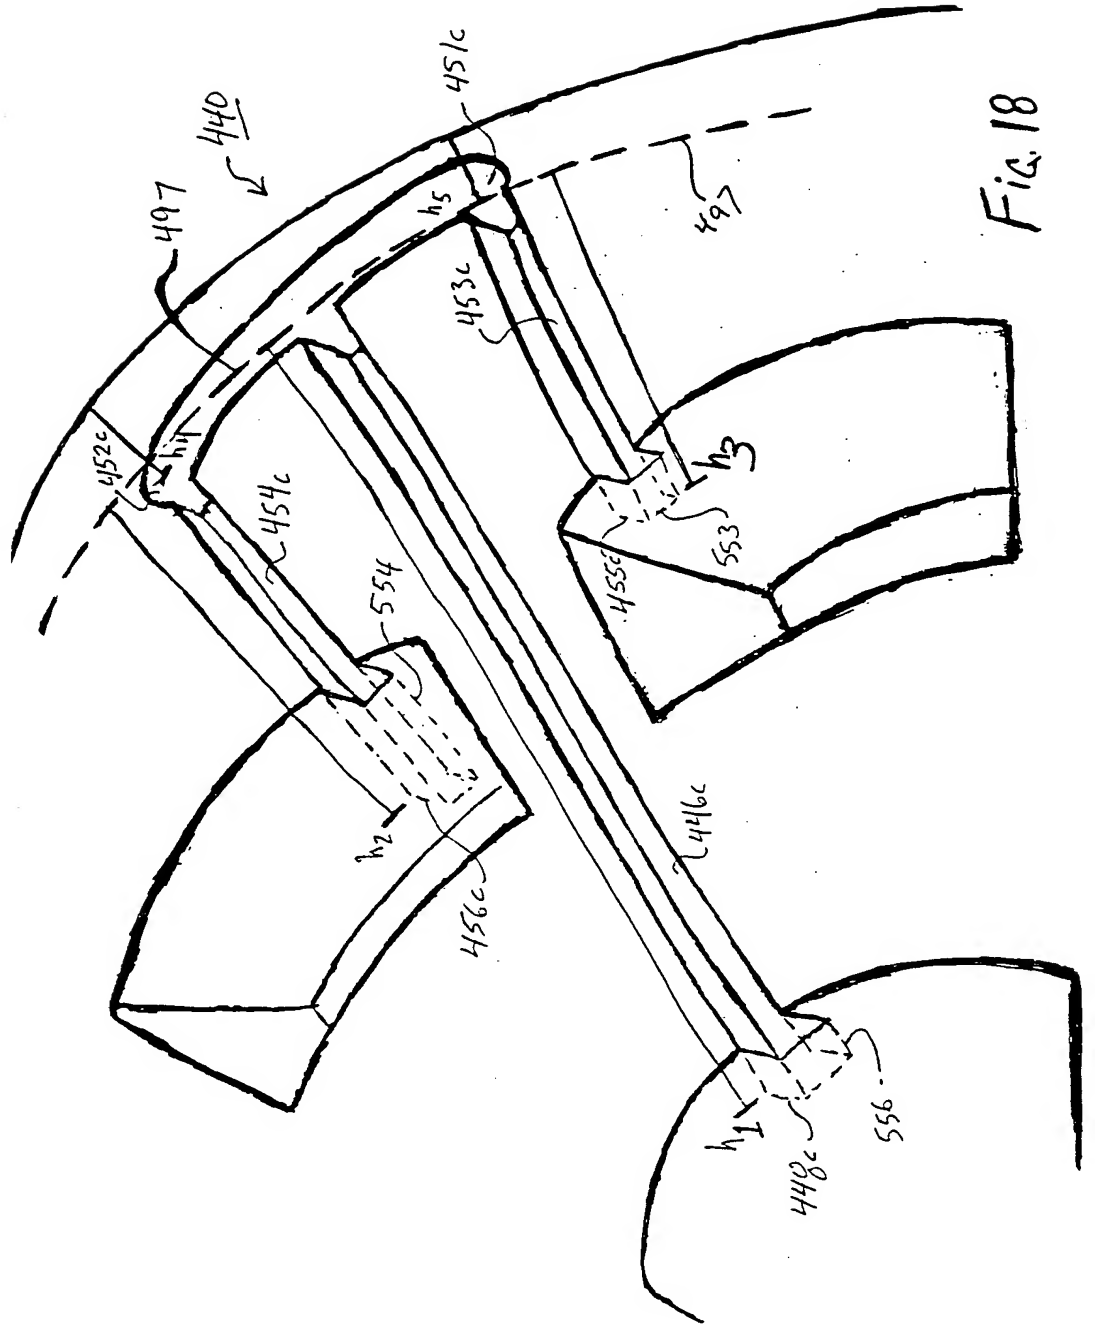


Fig. 18

10005431.10201

20/23

Load Set

①


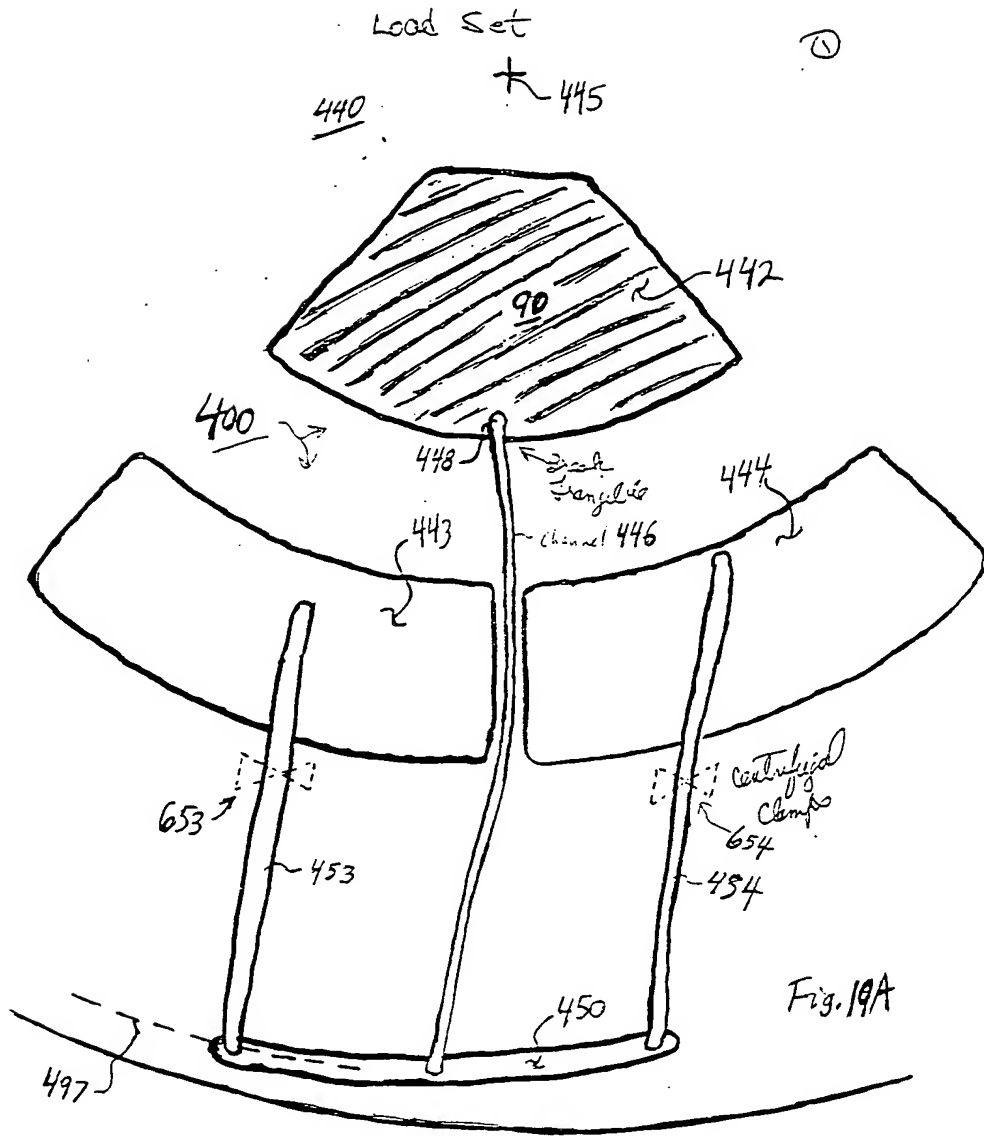


Fig. 19A


21/23

Transition to High RPM

445

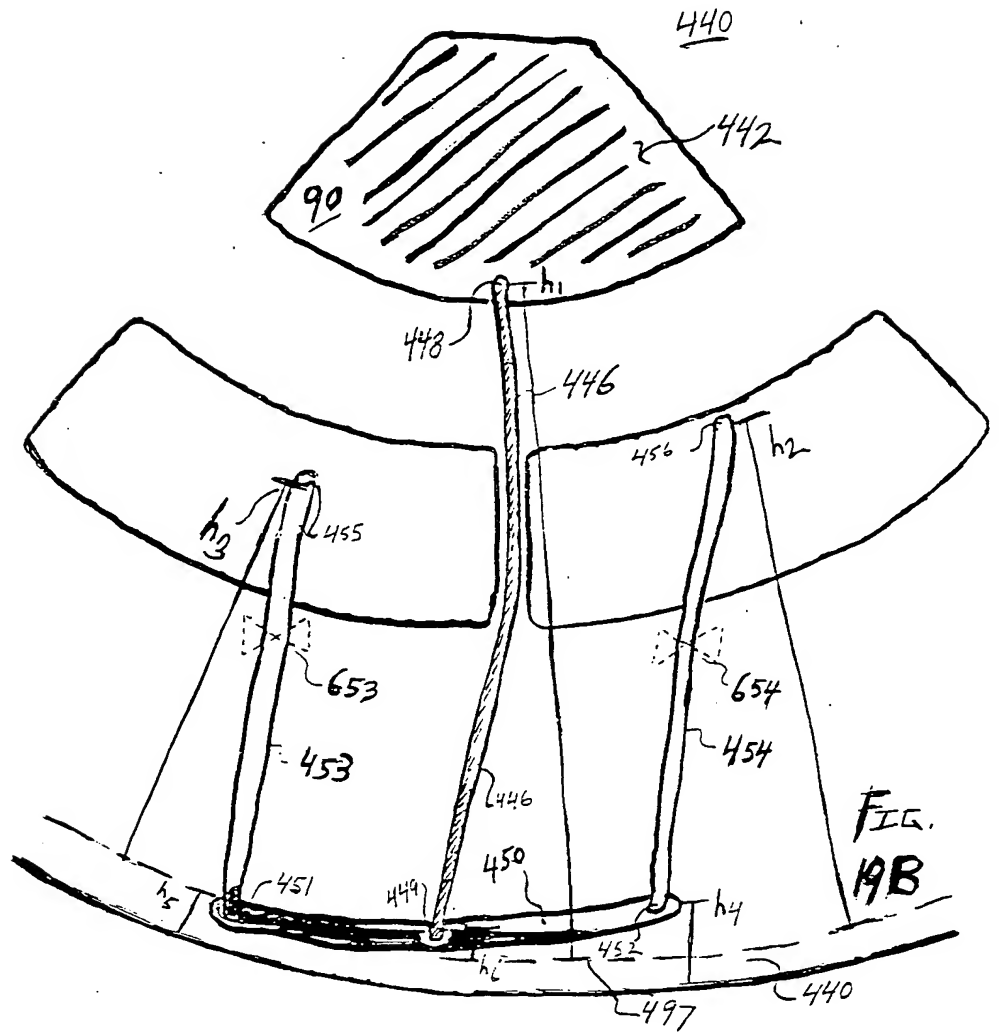

Centrifugal Clamps Open



100-433-200

23/23

